

garmin  asus

nüvifone™ M20

owner's manual



© 2009 Garmin Ltd. or its subsidiaries and ASUSTeK Computer, Inc.

Garmin International, Inc.	Garmin (Europe) Ltd.	Garmin Corporation	ASUSTeK Computer Inc.
1200 East 151 st Street,	Liberty House	No. 68,	15 Li-Te Road,
Olathe, Kansas 66062,	Hounsdown Business Park,	Jangshu 2 nd Road,	Peitou, Taipei,
USA	Southampton, Hampshire,	Shijr, Taipei County,	Taiwan 11259
Tel. (913) 397.8200 or	SO40 9RB UK	Taiwan	Tel. 886/2.2894.3447
(800) 800.1020	Tel. +44 (0) 870.8501241	Tel. 886/2.2642.9199	Fax 886/2.2890.7698
Fax (913) 397.8282	(outside the UK)	Fax 886/2.2642.9099	
	0808 2380000 (within the UK)		
	Fax +44 (0) 870.8501251		

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin and ASUS. Garmin and ASUS hereby grant permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin and ASUS reserve the right to change or improve their products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit www.garminasus.com for current updates and supplemental information concerning the use and operation of this and other Garmin-Asus products.

The combined Garmin-Asus logo is a trademark of Garmin Ltd. and ASUSTeK Computer, Inc.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Ciao!™, nūMaps Guarantee™, and nūvifone™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Microsoft, Excel, OneNote, PowerPoint, ActiveSync, Windows, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin or ASUS is under license. Wi-Fi is a registered mark of the Wi-Fi Alliance. Panoramio is a trademark of Google Inc. OperaMobile is a trademark of Opera Software ASA.

Introduction

The nüvifone™ M20 is a multi-media mobile phone with integrated navigation and services.

Get Support

Go to www.garminasus.com for in-country support information.

Register Your Product

Register your product at www.garminasus.com to help us better support you. Keep the original sales receipt, or a photocopy, in a safe place.

Introduction.....	i	Enter Data.....	11
Get Support	i	Use the Input Panel	11
Register Your Product.....	i	Write and Draw Your Notes	12
Get Started	1	Record a Voice Note.....	12
nüvifone Device Features.....	1	Use the Phone.....	13
Install the SIM Card and the Battery	2	Open the Phone Application	13
Charge the Battery	3	Dial a Number.....	13
Turn On Your nüvifone.....	3	End a Call	13
Mount the nüvifone in Your Vehicle	3	Use In-Call Options	14
Get to Know Your nüvifone	5	Receive a Call	15
Use the Home Screen	5	Set Up Voicemail	15
Use the Stylus	6	Call Voicemail.....	15
Scroll the Screen	6	Place a Conference Call.....	15
Use the Navigation Key	6	Place a Video Call	16
Adjust the Volume.....	6	View Call History	17
Open the Start Menu	7	Add a Contact	17
Learn More	7	Call a Contact	17
Lock Your nüvifone	7	Search for a Contact.....	18
Tips.....	7	Add a Contact to Favorites.....	18
About the LEDs	7	Copy from the SIM Card to Contacts.....	18
Status Bar Icons	8	Copy from Contacts to the SIM Card.....	18

Search for Locations.....	19	Follow Your Route	30
Find an Address.....	19	See the Next Turn.....	31
Set Your Home Location.....	19	View Details of the Route	31
Go! Page Options	20	About the Trip Computer	32
Change the Search Area	21	Save My Current Location	33
Find a Point of Interest	21	Take a Detour	33
Find Fuel Prices	22	Stop the Route.....	33
Check Flight Status	22	Edit the Active Route	33
Find Local Events	23	Save the Active Route	33
Find Movie Times	24	Plan a Route.....	34
Find Parking	24	Edit or Delete a Saved Route	34
Find a Location Using Local		Navigate a Saved Route.....	34
Search	25	Simulate a Route.....	35
Find Panoramio™ Photos	25	Avoid a Road or Area	35
Find Favorites.....	26	Edit Avoidances	35
Find Recently-Found Locations.....	26	Use the Navigation Tools	36
Find Cities.....	26	Browse the Map.....	36
Find Intersections	27	Open the Where Am I? Page.....	36
Enter Coordinates.....	27	Work with Favorites	37
Find Custom POIs	28	Work with Tracks	37
Send a Found Location	28	Work with Map Sets.....	38
Navigate to an Appointment	29	Ciao!™	39
Navigate to a Contact.....	29	Register Your Device	39
Find Selected Text.....	29	Join Ciao!.....	39

Table of Contents

Invite a Friend	40	Read Messages.....	48
Accept an Invitation	40	Set Up an E-mail Account.....	49
View My Details	40	Send an E-mail Message	50
About Friend Status.....	41	Read an E-mail Message	50
View Friends	41	Manually Send/Receive E-mail Messages	50
View Invited Friends	41	Synchronize E-mail Messages	50
Accept or Decline an Invitation	42	Search the Internet	51
Hide Your Location	42	Use Internet Sharing.....	51
Remove a Friend	42	Read the News	52
View Ciao! Networks	42	Update News Articles	52
Disable Ciao!	42	Read News Articles	52
Use Connected Services.....	43	Create a New Category	53
About Connected Services	43	Add a Channel.....	53
About Traffic	43	Edit a Channel	53
View Weather Data.....	45	Export Content.....	53
Download Safety Cameras.....	45	Play Music	54
Use the White Pages.....	46	Play a Song	54
View Geo-News	46	Save a Song as a Ring Tone	55
Send and Receive		Play a Playlist	55
Messages	47	View Pictures and Videos	56
Send an SMS/Text Message	47	View a Picture.....	56
Send a Multimedia Message (MMS)	47	View a Slideshow	57
Send a Location Message	48		

Play a Video	57	Search for Files	70
Play a Video Stream	58	Get Connected	71
Use the Camera	59	Manage Wireless Connections	71
Take a Picture	59	Turn Off the Phone	71
Record a Video	60	Turn on Flight Mode	71
Organize Your Life	61	Set Up a Wi-Fi Connection	71
Use the Calendar	61	About Bluetooth	72
Open the Calendar	61	Exchange Files Using FTP	74
Use Tasks	62	Customize Your nüvifone	75
Set the Clock and Alarms	63	Adjust the Backlight	75
Convert Currency	65	Align the Screen	75
Microsoft® Office Mobile	66	Orient the Screen	75
Synchronize Your nüvifone ..	67	Change the Lock Settings	76
Install and Configure ActiveSync on Your Computer	67	Set Up Gester	76
Synchronize Using the USB Cable	68	Change the Appearance	77
Enable the USB Connection Mode Page	68	Customize the Call Settings	78
Synchronize with an Exchange Server	69	Configure Your Phone Network Profile	79
Synchronize Using Bluetooth® Technology	69	Use SMS Cell Broadcast	80
Backup and Restore Files	70	Adjust the Navigation Settings	80
		Change Connected Services Settings	83
		Change the GPS Settings	83

Table of Contents

Change the Camera and Video

Settings	84
View Device Information	87
View System Information	87
Restore the Default Settings	87

Appendix 88

nüMaps Guarantee™	88
Additional Maps	88
Update the Software	88
Reset the nüvifone	88
Battery Information	88
Acquire GPS Satellite Signals	89
Change the Fuse in the Vehicle	
Power Cable	90
Mount on Your Dashboard	90
Specifications	91

Important Safety and Product Information..... 92

Troubleshooting Issues 99

Index 100

Get Started



See the *Important Safety and Product Information* on [page 92](#) for product warnings and other important information.

Download the latest owner's manual at www.garminasus.com/nuvifoneM20.

 
nüvifone Device Features



Install the SIM Card and the Battery

WARNING: This product contains a lithium-ion battery. To prevent damage, remove the device from the vehicle when exiting or store it out of direct sunlight.

1. Slide the battery cover off the back of the nüvifone.



2. Insert the Subscriber Identity Module (SIM) card in the slot at the top of the battery compartment. Insert the notched corner of the SIM card first with the gold contacts facing down.



3. Locate the lithium-ion battery that came in the product box.
4. Locate the metal contacts on the end of the lithium-ion battery.
5. Insert the battery so that the metal contacts on the battery match up with the metal contacts inside the battery compartment.



6. Slide the battery cover onto the back of the nüvifone.

Charge the Battery

Charge the battery for up to four hours before using for the first time. If you completely discharge the battery, recharge it for at least 20 minutes before turning on your nüvifone.

1. Insert the plug into the AC power adapter, if necessary.
2. Plug the USB cable into the AC adapter.
3. Connect the mini-USB end of the USB cable to the mini-USB connector on the bottom of your nüvifone.
4. Plug in the AC adapter into a power outlet.

You can also charge the nüvifone using the USB cable and your computer.

Turn On Your nüvifone

Press and hold the **Power** key to turn on and turn off the nüvifone.

Mount the nüvifone in Your Vehicle

Before mounting the nüvifone, see [page 97](#) for information about laws pertaining to windshield mounting.

1. Plug the vehicle power cable into the power connector on the back of the cradle.



2. Remove the clear plastic from the suction cup. Clean and dry your windshield and the suction cup with a lint-free cloth.
3. Place the suction cup on the windshield.

4. Flip the lever back, toward the windshield.



5. Snap the cradle onto the suction cup arm.
6. Fit the gold contacts on the left side of your nüvifone into the cradle.
7. Tilt the nüvifone back until it snaps into the cradle.



8. Plug the other end of the vehicle power cable into a power outlet in your vehicle.

Remove the nüvifone from the Cradle

1. Press up on the tab on the top of the cradle.
2. Tilt the nüvifone forward.

Remove the Cradle from the Mount


1. Turn the cradle to the right or left.
2. Apply pressure until the socket on the cradle releases the ball on the mount.

Remove the Suction Cup Mount from the Windshield

1. Flip the lever on the suction cup mount toward you.
2. Pull the tab on the suction cup toward you.

Get to Know Your nüvifone

Use the Home Screen

The Home screen appears when you turn on your device. If you are not currently in a call, you can press the **End** key or tap  > **Today** to return to the Home screen.

Tap to open the Start menu.

Application shortcut icons. Tap an icon to open the application.

To view more icons, touch and drag your finger between the two rows of icons.

Tap to place a phone call.

Tap to find and navigate to a location.

Tap to open the map.



Status bar. Tap an icon to view more information.

Current date and time. Tap to set the clock and alarms.

Use the Stylus

The stylus is a pen-like device. To remove the stylus, pull it out of the lower-right corner on the back of your nüvifone.

- Use the stylus to write, draw, select, or drag an item on the screen.
- Single-tap an item to select or open it.
- Tap and hold an item to see a menu.




Scroll the Screen

- Touch and drag your finger to slowly scroll the screen.
- Touch, drag, and quickly remove your finger to continue scrolling the menu after removing your finger.
- Tap the screen to stop scrolling.

Use the Navigation Key


Press the **Navigation** key in any direction to move the cursor in that direction. Press the center of the key to select an item.

Adjust the Volume


1. Tap  on the status bar.
2. Adjust the volume:
 - Drag the slider to adjust the device and phone volume.
 - Tap  to turn off the volume and turn on the Vibrate feature.
 - Tap  to turn off the volume.

You can also press the **Volume** keys on the left side of the device to adjust the volume.

Open the Start Menu

Tap  to open the Start menu, which provides access to the programs, settings, and the Help file.

Learn More

1. Tap  > **Help**.
2. Tap **Search** and enter a search term.
3. Tap a topic.





Lock Your nüvifone

You can lock the touchscreen on your nüvifone to prevent accidental taps.

1. With the nüvifone turned on, slide down the **Hold** key on the right side of the nüvifone.
2. Slide up the **Hold** key to unlock your nüvifone.

To lock your phone automatically after a period of inactivity, see [page 76](#).

Tips

- Tap  to access the menu for a particular page.
- Tap  and  to see more choices.
- Tap  to return to the previous page.

About the LEDs

Red Blinking—battery is low.

Red Constant On—battery is being charged.











Green Constant On—battery is fully charged.

Green Blinking—network is detected.











 
 


Blue Blinking—Bluetooth® or Wi-Fi® technology is enabled.














Status Bar Icons

The icons along the top of the screen indicate the status of various system items. Some icons you can tap to access more information.

Type	Icon	Description
Call status		Call in progress
		Call forwarded
		Call on hold
		Missed call
General Packet Radio Service (GPRS) connection status*		GPRS available
		Connecting via GPRS
		Connected via GPRS
		3rd Generation (3G) service available
		2nd Generation (2G) service available
		EDGE available


* This icon depends on your location and mobile service provider.

Messaging status		New message
		New voicemail message
Battery status		Battery fully charged
		Battery partially charged
		Battery charging
		Battery low
Signal status		No cellular phone service
		No signal
		Number of bars indicate signal strength
		Phone off
ActiveSync® connection status		ActiveSync synchronization in progress
		Connecting with ActiveSync
		ActiveSync connection not active
		Synchronization error

Sound status		Sound on
		Sound off
Wi-Fi status		Wi-Fi is available
		Wi-Fi connected
Bluetooth technology headset connection		Bluetooth stereo headset connected
		Hands-free on
Roaming service		Roaming service. This icon appears if you have the international roaming feature.
Mode status		Vibrate or Meeting mode on
Speakerphone status		Speakerphone on
Alarm status		Alarm is set
SIM card status		No SIM card installed
Notification status		Notice indicator
Location Search		Tap to find information about this location.



Enter Data

Use the Input Panel



When you start an application or tap a field that requires you to input data, the  Input Panel icon appears.

Select a Different Input Method

Not all methods are available in all regions.


1. Tap  to open the Input Panel options.
2. Tap an input method.
3. Tap .

Use the On-screen Keyboard

1. Tap  to open the Input Panel.
2. Tap the keys on the on-screen keyboard to enter.
3. Tap  to close the keyboard.

Adjust the Word Completion Settings

You can adjust the automatic word completion (predictive text) settings

1. Tap  > **Settings** > **Advanced Settings** > **Personal** tab > **Input**.
2. Tap the **Word Completion** tab, and adjust the settings.

Use the Block Recognizer

The Block Recognizer allows you to use a single stroke to write letters, numbers, symbols, or punctuation, which are converted into typed text.

Write letters in the left side of the box. Write numbers in the right side of the box.

Use the Letter Recognizer

The Letter Recognizer allows you to write individual letters, numbers, or special characters, which are converted into typed text.


Write capital letters in the left side of the box. Write lower case letters in the middle. Write numbers in the right side of the box.

Use the Transcriber

Transcriber is a handwriting recognition program that also recognizes numbers and symbols. Transcriber is not available in all languages.


Tap the screen where you want the text to appear. Use the stylus to write legibly on the screen. The handwriting is converted to text after you lift the stylus from the screen.

Write and Draw Your Notes





1. Tap  > **Programs** > **Notes** > **New** > **Menu**.
2. Tap **Draw**.
3. Write or draw on the screen.

4. Tap **OK** to save the note.

Set the Default Input Mode for Notes

1. Tap  > **Programs** > **Notes** > **Menu** > **Options**.
2. Tap **Writing** for the Default mode.
3. Tap **OK** when finished.

Record a Voice Note

1. Tap  > **Programs** > **Notes**.
2. Tap **New** or tap a saved note to open it.
3. Tap **Menu** > **View Recording Toolbar**, if necessary.
4. Tap  to begin recording.
5. Place the receiver near your mouth or source of sound.
6. Tap  when finished recording.
7. Tap  to play the voice recording.
8. Tap **OK** to save the note.


Use the Phone

Open the Phone Application

Use one of the following methods to open the phone application:

- Press the **Send** key.
- From the Home screen, tap **Call**.



Dial a Number

1. Press the **Send** key.
2. Tap  to open the keypad.



3. Dial the number.


Note: Tap and hold ***** to enter a , (comma) and **0** to enter a **+** (plus sign).

4. As you dial, a list appears showing similar numbers you have dialed.
 - Tap  to view the entire list.
 - Tap a number in the list to select the number.
 - Tap  to return to the keypad.
5. Press the **Send** key.

End a Call

To end a call, press the **End** key.

Use In-Call Options

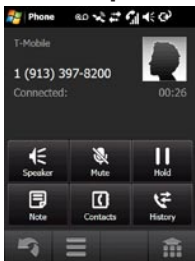

While you are in a call, the following options appear:

Speaker—activate the speakerphone.

Mute—mute the audio input.

Hold—place the current call on hold.

Swap—change between the current call and the call on hold, if you are on call waiting.

Note—write a note related to this call. You can view the note by tapping the call in your call history.

Contacts—view your contacts.

History—view your call history.

—view the following options:

- **Turn On Hands-Free Mode**—activate your hands-free device, if available.
- **Conference Call**—start a conference call, if you have a call on hold and another call active.

The phone hides these options if you are in a call and do not interact with the phone for 4 seconds. To show the options again, press the **Send** key or the **Navigation** key.

Receive a Call


Tap **Answer** to answer the call.

Tap **Ignore** to reject the call or send the call to voicemail, if voicemail is set up.


If the nüvifone is locked, complete the puzzle to answer or ignore the call.

If you answer a call while you are already on another call, the original call is placed on hold.



Set Up Voicemail

1. Tap  > **Settings** > **Advanced Settings** > **Personal** tab > **Phone** > **Services** tab.
2. Tap **Voicemail and Text Messages** > **Get Settings**.
3. Verify that your voicemail number is correct, and tap **OK**.


Call Voicemail

1. Press the **Send** key.
2. Tap .
3. Tap and hold **1**.

Place a Conference Call


1. Place a call to the first phone number.
2. Tap **Hold**.
3. Tap , and place a call to the second phone number.
4. Tap  > **Conference Call**.

To view the other members of the conference call, tap **More**.

If you receive a call while you are already on another call, you can start a conference call by tapping  > **Conference Call**.





Speak Privately During a Conference Call

You can speak privately with another member of the conference call.

1. During the conference call, tap **More > Private**.
2. Tap a phone number. The other members of the conference call can continue to speak to each other.
3. To end the private conversation, tap  > **Conference Call**.





Place a Video Call

Video calling is not available on all nüvifone devices.


1. Place a call.
2. Tap .
3. Use the following options during the call:
 - —interchange the images on your screen.
 - —hide your image from the other person on the call.
 - —change from your primary camera to a second camera, if one is available. If you activate a second camera, a zoom option appears.

When you are on a video call, incoming calls are automatically sent to voicemail.




View Call History

1. Press the **Send** key.
2. Tap  if necessary.
3. Tap a number or a contact in the list to view your call history for that number or contact.
4. If a call in the list is marked with , tap the call to view the notes associated with that call.
5. Select an option:
 - Tap **Call** or press the **Send** key to place a call.
 - Tap **Video Call** to place a video call.
 - Tap **More** to view contact information, if available.
 - Tap  > **Save as Contact** to save the phone number as a contact.
 - Tap  > **Delete** to delete this call history.


Clear Your Call History

1. Press the **Send** key.
2. Tap .
3. Tap  > **Clear All**.



Add a Contact

1. Press the **Send** key.
2. Tap  >  > **New Contact**.
3. Enter the information for the contact. Tap **Done** when finished.
4. Tap **More** to add additional information, if necessary. Tap **OK** when finished.
5. Tap  to save the contact.

Call a Contact

1. Press the **Send** key.
2. Tap .
3. Tap a contact.
4. Tap **Call**.

Search for a Contact

1. Press the **Send** key.
2. Tap  > .
3. Enter the contact name, and tap **Done**.
4. Tap **More** to search your company directory or the white pages.

Search Your Company Directory



You can search your company directory, if available. You must first set up the device to use your company's Microsoft Exchange Server. An active Internet connection is required.

Search the White Pages

You can search the regional white pages. White pages are not available in all areas. An active Internet connection is required.

Add a Contact to Favorites


You can include up to 18 contacts in favorites.

1. Press the **Send** key.
2. Tap  > .
3. Tap the contact you want to add.

Copy from the SIM Card to Contacts

1. Press the **Send** key.
2. Tap  >  > **View By** > **Both**.

Copy from Contacts to the SIM Card

1. Tap  > **Programs** > **SIM Manager** > **Menu** > **Retrieve from Contacts**.
2. Select the Contacts to copy.
3. Tap **Retrieve**.

You cannot retrieve the phone Contacts when the SIM card is full.

Search for Locations

The Search menu provides several different categories you can use to search for locations.

Find an Address



NOTE: Depending on the version of the built-in map data on your device, the button names and order of steps could be different than the steps below.

1. Tap **Search > Address**.
2. If necessary, select the state, country, or province.
3. To search all cities, tap **Search All Cities**. You can also tap **Spell City**, enter all or part of the name, and then tap the city in the list.
4. Enter the house number and then tap **Next**.

5. Enter all or part of the street name or number and then tap the street in the list.
6. Tap the correct address in the list.

Set Your Home Location

You can save a favorite called “Home” and quickly generate a route to it.

1. Tap **Search > Home**.
2. Tap **Enter My Address** or **Use Current Location**.


Go Home

After you have saved your home location, you can create a route to it.

Tap **Search > Home**.

Go! Page Options

After you find a location, an information page appears, displaying the address and the phone number (if known) of the location.

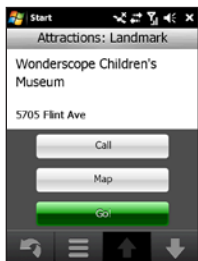

Call—dial the phone number of the location, if available.

Map—view the location on the map.

Go!—create a route to the location.


Tap  for the following options:

- **Save to Favorites**—save the location to Favorites, which is a collection of your favorite locations.
- **Send Location**—send the location to other users as a location message.
- **Find Nearby**—search for other locations near this one.
- **Connected Services**—view connected services for the location.


Change the Search Area

By default, your nüvifone finds locations near your current location.

Find a Location Near Your Route

1. Tap **Search**.
2. Tap  > **Near**.
3. Tap the appropriate option, and then tap **Done**.

Find a Location Near a Different City

1. Tap **Search**.
2. Tap  > **Near**.
3. Tap **Near Other**.
4. Tap **Spell City** or **Browse Map**.
5. Find the location, and then tap **Done**.

Find a Point of Interest

The detailed maps loaded in your nüvifone contain millions of points of interest, such as restaurants, hotels, and auto services.

Find by Category

1. Tap **Search** > **Points of Interest**.
2. Tap a category.
3. Tap a subcategory or tap **All Categories**. A list of items near your current location appears.
4. Tap the item you want.

Find by Spelling the Name

1. Tap **Search** > **Points of Interest**.
2. Tap **Spell Name**, enter all or part of the name, and tap **Done**.
3. Tap the item you want.

Find Fuel Prices

This service is available as a paid Connected Services subscription. Fuel prices are not available in all areas. A data connection is required for this feature.


1. Tap **Search > Points of Interest > Fuel > Fuel Prices**.
2. Tap a fuel type. A list of fuel prices near your current location appears.
3. To sort the list by lowest price, tap **Sort**. To sort by distance, tap **Sort** again.
4. Tap an item in the list.




TIP: You can also find fuel prices under **Connected Services > Fuel Prices**.

Check Flight Status

Flight status information may not be available in all areas. A data connection is required for this feature.

1. Tap **Search > Points of Interest > Transportation > Flight Status**.
2. To view flight information from an airport near another city, tap  **> Near**.
3. Tap an airport in the list.
4. Select an option to find a flight:
 - **Check Flight Number**—enter a flight number, and then tap **OK**. Tap a flight in the list.
 - **Departures**—tap **Select Using Destination City**, **Select Using Airport Code**, or **View All Departures**. Enter the appropriate data, and then tap a flight in the list.

- **Arrivals**—tap an airline, and then tap a flight in the list.
5. If your flight has multiple connections, tap  > **Show Next Leg**, and then tap the next flight.



TIP: You can also check flight status under **Connected Services > Flight Status**.

Find Local Events

You can search for upcoming events, including art shows, musical performances, and sporting events.

This service is available as a paid Connected Services subscription. Local events are not available in all areas. A data connection is required for this feature.

1. Tap **Search > Points of Interest > Entertainment > Local Events**.


2. Tap a category.
3. Tap the arrows or the date to select a different date, if necessary.
4. Tap an event to view more information.
5. To add the event as an appointment on your calendar, tap **Remind Me!**. If the event begins within two hours of the current time, you can tap **Go!** to navigate to the event.



TIP: You can also find local events prices under **Connected Services > Local Events**.

Find Movie Times

This service is available as a paid Connected Services subscription. Movie times are not available in all areas. A data connection is required for this feature.

1. Tap **Search > Points of Interest > Entertainment > Movie Times**.
2. Tap the arrows or the date to select a different date, if necessary.
3. Tap **Find by Movie Title** or **Find by Movie Theater**.
4. Tap a movie title and a theatre.
5. To add a show time as an appointment on your calendar, tap  **> Remind Me!**, and tap a show time.

If the movie begins within two hours of the current time, you can tap **Go!** to create a route.



TIP: You can also find movie times under **Connected Services > Movie Times**.

Find Parking

This service is available as a paid Connected Services subscription. Parking is not available in all areas. A data connection is required for this feature.

1. Tap **Search > Points of Interest > Auto Services > Connected Parking**.
2. Tap a location in the list to view more information.



TIP: You can also find up-to-date parking information under **Connected Services > Parking**.

Find a Location Using Local Search

Local search enables you to search for the most current location information.

Local Search is not available in all areas. A data connection is required for this feature.



TIP: You can also search using Local Search under **Connected Services > Local Search**.

Spell a Location Name or Category

In addition to searching by spelling the name of a location, you can also spell the names of categories, like “salon” or “coffee.”

1. Tap **Search > Local Search**.
2. Tap **Spell Name**, enter your search term, and tap **Search**.
3. Tap the item you want.

Search by Category


1. Tap **Search > Points of Interest > Local Search**.
2. Tap a category, and then tap a subcategory.
3. Tap the item you want.

Find Panoramio™ Photos

Panoramio photographs contain special information about the location where the photograph was taken. You can use this information to navigate to locations and landmarks shown in Panoramio photographs.

A data connection is required for this feature.

1. Tap **Search > Panoramio Photos**.

2. A list of photographs from nearby locations appears. To find photographs near a different location, tap  > **Near**, and select a location.
3. Tap a photograph in the list.



TIP: You can also find Panoramio pictures under **Connected Services** > **Panoramio Photos**.

Find Favorites

1. Tap **Search** > **Favorites**.
2. To search by name, tap **Spell**, enter all or part of the name.
3. Tap the favorite you want.

Find Recently-Found Locations

The nüvifone stores the last 40 locations you have found.

1. Tap **Search** > **Recent Finds**.
2. Tap the item you want.

Find Cities

1. Tap **Search** > **Cities**. A list of cities near your current location appears.
2. To search by name, tap the edit box along the top of the screen, enter the name, and then tap **Done**.
3. Tap a city.

Find Intersections

1. Tap **Search > Intersection**.
2. If necessary, select the state, country, or province.
3. To search all cities, tap **Search All Cities**. You can also tap **Spell City**, enter all or part of the name, and then tap the city.
4. Enter all or part of the first street name or number and then tap the street.
5. Enter all or part of the second street name or number and then tap the street.
6. Tap the correct intersection in the list.

Enter Coordinates

If you know the geographic coordinates of your destination, you can use your nüvifone to navigate there. This can be especially helpful when geocaching.

1. Tap **Search > Coordinates**.
2. Enter the coordinates, and tap **Next**.

Find Custom POIs



Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.

You can create or download Custom POI lists and install them on your device using Garmin POI Loader software available at www.garminasus.com/poiloader. See the POI Loader Help file for more information.

1. Use POI Loader to load Custom POIs on your device.
2. Tap **Search** > **Extras** > **Custom POIs**.
3. Tap a Custom POI.

Send a Found Location

You can find a location and send it to people using messaging or e-mail.


1. Find a location.
2. On the Go! page, tap  > **Send Location**.
3. Tap a contact.
4. Tap an account.
5. To attach a map of your location, tap **Yes**.
 - Use the map tools to adjust the map scale or to pan to a different location.
 - Tap **Preview** to view the map, and then tap **OK**.
6. To edit the message, tap .
7. Tap **Send**.

Navigate to an Appointment

You can create a route to an appointment in your calendar.


1. From your calendar, tap an appointment.
2. Tap **Menu > Location Info**.
3. Select an option to find the appointment location.
3. Tap the location.
4. Tap **Go!**.

Navigate to a Contact

1. Press the **Send** key.
2. Tap .
3. Select a contact.
4. Tap **Go!**.

Find Selected Text

You can find location information for selected text in an SMS message, in an e-mail, or in your Web browser.

1. Drag to select the text.
2. Tap .
3. Select an option:
 - **Name**—search for the item by name.
 - **Address**—search for the item by address.
 - **Local Search**—search for the location on the Internet.
4. Tap an item in the list.

Follow Your Route

After you select a location and tap **Go!**, your nüvifone creates a route to the location. Your route is marked with a magenta line.

If you depart from the original route, your nüvifone recalculates the route and provides new directions.


A speed limit icon may appear as you travel on major roadways. This icon displays the current speed limit of the roadway.



- 1 Tap to view the next turn.
- 2 Tap to view the route details.
- 3 Tap to view the Traffic menu.
- 4 Tap to zoom in and zoom out.
- 5 Tap to browse the map.
- 6 Tap to view the trip computer.
- 7 Tap to return to the Home screen.
- 8 Tap to view the Where Am I? page.

See the Next Turn

When you are navigating a route, you can view the turn on the map and the distance and time left before you reach the turn.

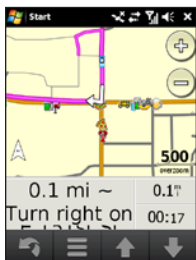


1. While navigating to a destination, tap the turn bubble on the map, or tap any turn in the turn list.
2. Tap the arrows to see more turns in the route.

View Details of the Route

When you are navigating a route, you can view all of the turns for your entire route and the distance between turns.



1. While navigating to a destination, tap the text bar on the top of the map.
2. Tap a turn in the list to view the turn on a map.
3. Tap  to edit the route.


About the Trip Computer


The trip computer displays your current speed and provides helpful statistics about your trip.

If you make frequent stops, leave your nüvifone turned on so it can accurately measure elapsed time during the trip.

Open the Trip Computer



Use one of the following methods to open the trip computer:

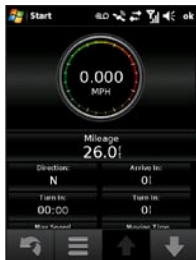- Tap **Speed** on the map.
- Tap  > **Programs > Tools > Trip Computer.**




Reset the Trip Computer


Reset the trip computer before beginning a trip.

1. Tap  > **Programs > Tools > Trip Computer.**
2. Tap  > **Reset**
3. Select an item to reset.

Save My Current Location


1. Tap **View Map**.
2. Tap the lower-right data field.
3. Tap  > **Save**.

Take a Detour


1. While navigating a route, tap .
2. Tap **Detour**.

The nüvifone attempts to get you back on your original route as quickly as possible. If the route you are currently taking is the only reasonable option, the nüvifone might not calculate a detour.

Stop the Route

1. While navigating a route, tap .
2. Tap **Stop**.

Edit the Active Route

1. While navigating a route, tap the text bar on top of map.
2. Tap  > **Edit**.
3. Tap **Add Start Point** or **Add End Point**.
4. Select a method to select a via point.
5. Tap **Done** when finished.

You can also add via points to a route using the Find feature. Find an item, and then tap **Go!**. When prompted to add the point as a via point to the current route, tap **Yes**.


Save the Active Route

You can save the route you are currently navigating and use it again later.

1. Return to the Home screen.
2. Tap  > **Programs** > **Tools** > **Manage My Data** > **Routes**.


3. Tap **Save Active Route**.
4. Tap **OK**.

Plan a Route

1. Tap **Tools > Manage My Data > Routes**.
2. Tap **Create New Custom Route**.
3. Select a starting point.
4. Select a final destination.
5. Add via points as necessary, or tap **None**.
6. Tap your route calculation preference.
7. Tap  > **Save** to save the route, or tap **Go!** to save and navigate the route.

Edit or Delete a Saved Route

1. Tap **Tools > Manage My Data > Routes**.
2. Tap **View Routes**.



3. Tap a route, and then tap  > **Edit**.
4. Delete the route or make changes as needed.

Navigate a Saved Route



1. Tap **Tools > Manage My Data > Routes**.
2. Tap **View Routes**.
3. Tap the route you want to navigate.
4. Tap **Go!**.

Simulate a Route



If the GPS is off, you can simulate driving a route.

1. Tap  > **Settings** > **Navigation** > **GPS** > **GPS Status**.
2. Tap  > **Disable GPS**.
3. Find a destination and tap **Go!**.
4. Tap **Tools** > **Simulate Route**.

Avoid a Road or Area

1. Tap  > **Settings** > **Navigation** > **Routing** > **Avoidance Setup** >  > **Custom** > **Add New Road** or **Add New Area**.
2. Select the road or area you want to avoid, and tap **Next**.
3. Tap **OK** to save the avoidance.

Edit Avoidances

1. Tap  > **Settings** > **Navigation** > **Routing** > **Avoidance Setup** >  > **Custom** > **View List**.
2. Tap the avoidance you want to edit.
3. Select an option.


Deactivate Avoidances


1. Tap  > **Settings** > **Navigation** > **Routing** > **Avoidance Setup**.
2. Clear the avoidance check box.

Use the Navigation Tools





Browse the Map

1. Use one of the following methods to open the Browse Map:
 - Tap  > **Programs** > **Tools** > **Browse Map**.
 - Tap **View Map**, and then tap the vehicle icon.
2. Drag to move the map.

3. Tap **+** to zoom in. Tap **-** to zoom out.
4. Tap a location on the map, and then tap  for more options.


Open the Where Am I? Page

The **Where Am I?** page displays information about your current location. This is a helpful feature if you need to tell emergency personnel your location.


1. Use one of the following methods to open the Where Am I? page:
 - Tap  > **Programs** > **Tools** > **Where Am I?**.
 - Tap **View Map**, and then tap the lower-right corner data field.
2. Tap a button to view the nearest locations in that category.
Tap  > **Save** to save your current location.

Work with Favorites


Save a Location as a Favorite

1. Find the item you want to mark as a favorite.
2. On the Go! page, tap  > **Save to Favorites**.


Edit Favorites

1. Tap  > **Programs** > **Tools** > **Manage My Data** > **Favorites**.
2. Tap a favorite, and then select an option.
3. Make changes as needed.

Create a Category

1. Tap  > **Programs** > **Tools** > **Manage My Data** > **Favorites**.
2. Tap a location, and then tap **Change Categories**.
3. Tap **Manage** > **Add Category**.
4. Enter the category name, and then tap **Done**.


Assign a Category

1. Tap  > **Programs** > **Tools** > **Manage My Data** > **Favorites**.
2. Tap a location, and then tap **Change Categories**.
3. Tap one or more categories, and then tap **Done**.

Work with Tracks

Record a Track


You can record the path you travel (called a “track”) and view it as a dotted line on the map.

1. Tap  > **Programs** > **Tools** > **Manage My Data** > **Tracks**.
2. Tap **Options**.
3. Tap **Recording Interval**, and then select how often you want track points recorded. **More Often** records more points and creates more-detailed tracks, but fills up track memory more quickly.

4. Tap **Show Active Track on Map**.
5. Tap **Enabled** to view the active track on the map while it is being recorded.

After you record tracks, you can save them and view them on the map.




Save a Track

1. Tap  > **Programs** > **Tools** > **Manage My Data** > **Tracks**.
2. Tap **Save Active Track**.
3. Tap **Save**.

After you save a track, it is recommended that you clear the track memory by tapping **Clear Active Track**.

Saved tracks appear on the map automatically.

View and Edit a Saved Track

1. Tap  > **Programs** > **Tools** > **Manage My Data** > **Tracks**.
2. Tap **View Saved Tracks**.
3. Tap a track.
4. To view the track on the map, tap  > **Map**.
5. To edit the track, tap  > **Edit**, and then select an option.

Work with Map Sets

Your phone includes built-in map data. You can also purchase additional map data from your Garmin or ASUS dealer.

To view the map sets loaded on your phone, tap  > **Programs** > **Tools** > **Manage My Data** > **Map Sets**.

Ciao!™

Ciao! periodically sends your location to our partner networks and downloads the most recent location of your friends. This application only submits your location when you tell it to, unless you enable automatic updates.

A data connection is required for this feature.

Register Your Device

Before you join Ciao! for the first time, you must first register your device.

1. Tap **Ciao!**.
2. Read and accept the on-screen messages.
3. Tap **Register**. The Web browser launches.
4. Follow the steps to register your device. After registering, you will receive an SMS message for verification.
5. Open the SMS message, and tap the link to complete the verification process.

You are now ready to join Ciao!.

Join Ciao!

After you register your device, you can join Ciao!.

1. Tap **Ciao!**.
2. Read and accept the registration information.
3. Tap a type of location update, **Manual** or **Automatic**.
4. Enter a display name.
5. Tap **Complete**. Your location is updated and becomes available in the network.

Invite a Friend

1. Tap **Ciao!** > **Invite**.
2. Tap an option to enter a phone number.
3. Tap the button under **Friend's Country**, and select a country.
4. Tap **Send Invite**.
5. Select the network your friend is using. If your friend is using Ciao!, you can select any network in the list. Tap **OK**.

Accept an Invitation


When you receive an invitation, a message appears on the screen.

1. Select the invitation in your list of friends.
2. Tap **Accept**.
3. Tap **Yes** to allow the friend to view your location. The location information for the friend appears.

4. Tap **Go!** to create a route to the friend, or tap **Map** to view the friend on the map.

After you accept an invitation from a friend, he or she becomes a “trusted” friend, and you can view location information for each other.

View My Details

1. Tap **Ciao!** > **My Details**.
2. To update your current location information, tap **Send Update**.
3. To change your status message, tap **Change Status**, and enter a new status message.
4. Tap  for the following options:
 - **Change Name**
 - **Change Updates**—tap **Auto** to update your location information automatically at regular intervals, or tap **Manual** to update your position only when you tap **Send Update**.

About Friend Status

Trusted—if the list shows the distance and direction to the friend, that friend is “trusted.” The friend has accepted an invitation from you, or you have accepted an invitation from the friend.

Invited—you have invited the friend, but he or she has not accepted or declined the invitation.

Pending—the friend has invited you, but you have not accepted or declined the invitation.

View Friends

1. Tap **Ciao!**.
2. Tap a friend in the list. The location information for the friend appears.
3. Tap **Go!** to create a route to the friend, or tap **Map** to view the friend's location on the map.

To view all of your friends on the map, tap **Ciao!** >  > **View Map**.

View Invited Friends


1. Tap **Ciao!**.
2. Tap an Invited friend in the list.
3. To remove the invitation, tap **Remove Invitation**.

Accept or Decline an Invitation


1. Tap **Ciao!**.
2. Tap a Pending friend in the list.
3. Tap **Accept** or **Decline**.

Hide Your Location

Tap **Ciao!** >  > **Hide**. Your current location is hidden from your friends.

To stop hiding, tap **Ciao!** >  > **Stop Hiding**.

Remove a Friend

1. Tap **Ciao!**.
2. Tap a friend in the list, and tap  > **Remove**.
3. Tap **Yes**.

View Ciao! Networks

1. Tap **Ciao!** >  > **Privacy**.
2. Tap  > **Networks**.
3. Tap a hyperlink to view a network Web site in the Web browser.

Disable Ciao!

1. Tap **Ciao!** >  > **Privacy**.
2. Tap  > **Disable Ciao!**.

All the Ciao! information stored on your device is removed. You no longer send any position updates.

To enable Ciao!, you must join Ciao! again.

Use Connected Services

About Connected Services

Use Connected Services to search for location-relevant information such as live weather data, flight status, and Panoramio photos. You can also access local search using the Internet.

Not all services are available in all areas. Additional services are available with a subscription. For more information, go to www.garminasus.com.

Your phone must have a data connection to access Connected Services. Your regular Internet and data transfer charges apply.

Your Connected Services account is activated automatically on most phones. If you need to activate your account manually, or to activate additional services, go to www.garminasus.com.

About Traffic

Traffic information and delay time are not available in all areas. This service is available as a paid Connected Services subscription. A data connection is required for this feature.



NOTE: Garmin and ASUS are not responsible for the accuracy of the traffic information.

About the Traffic Icon

When you are receiving traffic information, a traffic icon appears in the upper-left corner of the Map page. The traffic icon changes color to indicate the severity of traffic conditions on your route or the road you are currently travelling.

Green—traffic is flowing freely.

Yellow—moderate traffic congestion.

Red—very slow or stop-and-go traffic.

Traffic on Your Route

When calculating your route, the nüvifone examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the nüvifone automatically recalculates the route. You might still be routed through traffic if no better alternative

routes exist.

If a non-severe traffic delay occurs on your route, the traffic icon shows how much time the delay has added to your route. This time is already included in your estimated arrival time.

Manually Avoid Traffic on Your Route

1. On the Map page, tap the traffic icon.
2. Tap **Traffic On Route**.
3. Tap **Avoid**.

You might still be routed through traffic if no better alternative routes exist.

View the Traffic Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

1. On the Map page, tap the traffic icon.
2. Tap **Show Traffic Map**.

To return to the normal map, tap the traffic icon, and then tap **Show Normal Map**.

View Traffic Delays

1. On the Map page, tap the traffic icon.
2. Tap **Traffic Search** to view a list of traffic delays.
3. Tap an item in the list to view the delay on a map and details about the delay. If there is more than one delay, tap the arrows to view the additional delays.

View Weather Data

A data connection is required for this feature.

1. Tap **Weather**. Weather data for your current location appears.
2. To view details, tap an item in the list.
3. To show weather for a different location, tap  > **New City**, and then select an option.

Download Safety Cameras

This service is available as a paid Connected Services subscription. A data connection is required for this feature. Data not available for all areas.



CAUTION: Garmin and ASUS are not responsible for the accuracy of, or the consequences of using, a custom point of interest (POI) or a safety camera database.

1. Tap **Connected Services > Safety Cameras**.
2. Tap a region or regions in the list, and then tap **Done**.

Use the White Pages

This service is available as a paid Connected Services subscription. A data connection is required for this feature.

Find by Name in White Pages


1. Tap **Connected Services > White Pages > By Name**.
2. Enter the last name, and tap **Done**.
3. Enter the first name (optional), and tap **Done**.
4. Enter the postal code, if necessary.
5. To search near a different location, tap **Near**, and tap a location.
6. To re-enter the name, tap **Retry**.

Find by Phone Number in White Pages

1. Tap **Connected Services > White Pages > By Phone Number**.
2. Enter the area code and phone number, and tap **OK**.

View Geo-News

This service is available as a paid Connected Services subscription. A data connection is required for this feature. This service is only available in some areas.

1. Tap **Connected Services > Geo-News**.
2. To select a different location, tap  **> Geo-News Near**, and select a location.
3. Tap a news service.
4. Tap an item in the list to view details.

Send and Receive Messages

Your regular messaging fees apply when sending and receiving messages.

Send an SMS/Text Message

1. From the Home screen, tap **Message**.
2. Tap **Menu > New > Text Message**.
3. Enter a recipient, or tap **Menu > Add Recipient** to select from your Contacts list.
4. Enter the text message.
5. Tap **Send**.

Send a Multimedia Message (MMS)


1. From the Home screen, tap **Message**.
2. Tap **Menu > New > Multimedia Message**.
3. Tap **Select**.
3. Enter a recipient, or tap **Menu > Add Recipient** to select from your Contacts list.
5. Tap below the subject line to attach an image or video.
6. Tap **Insert Text** to enter the text of the message.
7. Tap **Insert Audio** to attach an audio file.
8. Tap **Send**.

Send a Location Message

Location messages allow you to send your current location information to other people.



CAUTION: Use caution when sharing your location information with others.

1. Create a message, and then tap **Menu > Location Info**.
2. Follow the instructions on the screen.
3. To attach a map of your location, tap **Yes**.
 - Use the map tools to adjust the map scale or to pan to a different location.
 - Tap **Preview** to view the map, and then tap **OK**.
4. To edit the message, tap .
5. Tap **Send**.



NOTE: Sending a map image requires MMS picture messaging support on the phones of both the sender and the receiver.

You can also send location messages when you view a contact, when you finish a phone call, or when you find a location.

Read Messages

As you receive messages, the message and e-mail icons on the Home screen display the number of unread messages.

1. Tap **Message**. Unread messages are displayed in bold.
2. Tap a message to read it.

Reply to a Message

1. Tap **Message**.
2. Tap a message, and then tap **Menu > Reply/Forward > Reply** or **Reply All**.

Forward a Message

1. Tap **Message**.
2. Tap a message, and then tap **Menu > Reply/Forward > Forward**.
3. Enter the addresses to which you want to forward the message.

Delete Messages

1. Tap **Message**.
2. Tap a message, and then tap **Menu > Delete**. The message is moved to the Deleted Item folder.

To recover a deleted message, move the message back from the Deleted Item folder.

To empty the Deleted Item folder, tap **Menu > Tools > Empty Deleted Items**.

If a message is deleted from the Deleted Item folder, it cannot be recovered.

Set Up an E-mail Account

Your nüvifone can automatically configure account information for some e-mail accounts.

If additional information is required, see your e-mail account provider.

1. Tap **E-mail**.
2. Enter your e-mail address and password.
3. Tap **Next** to obtain your e-mail settings from the Internet.
4. Follow the on-screen instructions to set up your e-mail account on your device.

Send an E-mail Message

1. Tap **E-mail**.
2. Tap an e-mail account.
3. Tap **Menu** > **New**.
4. Enter an e-mail address in the To field, or tap **Menu** > **Add Recipient** to select from your Contacts list. If you are sending a message to more than one recipient, separate the e-mail addresses with a semicolon (;).
5. Enter your message in the message field.
6. When finished, tap **Send**.

If you are working offline, e-mail messages are saved to the Outbox folder and sent the next time you connect.

Read an E-mail Message

1. Tap **E-mail**.
2. Tap an e-mail account, if necessary.
3. Tap an e-mail message to view it.

Manually Send/Receive E-mail Messages


1. Tap **E-mail**.
2. Tap an e-mail account.
3. Tap **Menu** > **Send/Receive**.
4. To stop this process, tap **Menu** > **Stop Send/Receive**.

Synchronize E-mail Messages

You can include e-mail messages as part of the general synchronization process. See [page 67](#). To connect directly to an e-mail server, see the ActiveSync Help file.

Search the Internet


1. Tap **Browser**.
2. Enter a search term or URL.
3. Tap the Web site you want to open.

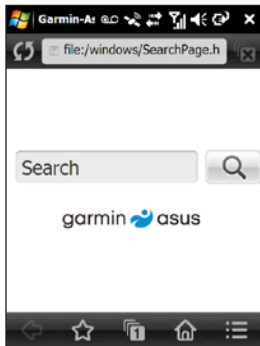

Use Internet Sharing

Use Internet Sharing to allow your computer to use the nüvifone Internet connection. Internet Sharing eliminates the need to have a separate data plan for Internet on your computer.

Your regular Internet and data transfer charges apply.

1. Tap  > **Programs**.
2. Tap **Internet Sharing**.
3. Connect your nüvifone to your computer using the USB cable.
4. Use the Internet on your computer.


Read the News

Newstation delivers breaking news and headline news to your device by retrieving the most current news from various Internet news sources.


Your device must be connected to the Internet to use Newstation.

Update News Articles

Automatically Update Articles


1. Tap  > **Programs** > **Newstation**.
2. Tap **Menu** > **Settings**.
3. Select an option to set the automatic update parameters.

Manually Update Articles


1. Tap  > **Programs** > **Newstation**.
2. Tap a category.
3. Tap **Menu**.
4. Tap **Update** to update the RSS feeds in the selected channel, or tap **Update All** to update the RSS feeds for all channels.

Your news articles are stored as RSS news feeds on your device. You may read the articles without being connected to the Internet.


Read News Articles

1. Tap  > **Programs** > **Newstation**.
2. Tap a category and a channel.
3. Tap an article.
4. Tap **Menu** for more options.


Create a New Category

1. Tap  > **Programs** > **Newstation**.
2. Tap **Menu** > **New Category**.
3. Enter a category name.


Add a Channel

1. Tap  > **Programs** > **Newstation**.
2. Tap a category.
3. Tap **Menu** > **New Channel**.
4. Select an import method:
 - Tap **Input from URL**, enter the URL address, and tap **Next**.
 - Tap **Import from a file** > **Next**. Select a folder and a file. Select a channel, and tap **Next**.
5. Select a category for this new channel.
6. Tap **Finish**.

Edit a Channel

1. Tap  > **Programs** > **Newstation**.
2. Tap a category, and tap a channel.
3. Tap **Menu** > **Properties**.
4. Change the information for the channel.
5. To automatically update the selected channel, select the **Auto update this channel** check box.

Export Content

1. Tap  > **Programs** > **Newstation**.
2. Select an item to export:
 - To export a category, tap a category, and tap **Menu** > **Export Category**.
 - To export a channel, tap a category and a channel, and tap **Menu** > **Export Channel**.
3. Enter the necessary information.

Play Music

The music player supports the following file types:



- MP3
- WMA
- AAC/AAC+
- WAV

The music library automatically includes all songs you have saved in all of the following locations:



- My Documents\My Music
- My Storage\MUSIC
- MUSIC

For more information on copying files from your computer to your device, see ActiveSync Help on your computer.


Play a Song

1. Tap **Music** > .
2. Tap a category. Drag the bar at the top of the screen to show more categories.
3. Tap a subcategory, if necessary.
4. Tap a song in the list. The music player plays the song and the following songs in the list.
5. Tap the progress bar and drag to jump to a different point in the song.
6. Tap  for more options.

Save a Song as a Ring Tone

1. Tap **Music** > .
2. Select a song.
3. Tap  > **Save as Ring Tone**.
4. Tap and drag the pointers to select the portion of the song you want to save as a ring tone.
5. Tap **Preview** to play a preview of the selected portion of the song.
6. Tap **Save**.

Play a Playlist

Tap **Music** >  > **Playlists**. In addition to the playlists you have imported from your computer, the following default playlists appear:

- **Recently Added**—includes the last 50 songs you have added to your device.
- **Frequently Played**—includes the 20 songs you have played most often.
- **Recently Played**—includes the last 20 songs you have played.

View Pictures and Videos

The Media Gallery supports the following file types:



- JPEG
- PNG
- BMP
- 3GP
- WMV
- MP4

The Media Gallery automatically displays files you have saved in the following locations:


- My Documents\My Pictures
- My Storage\My Pictures

For more information on copying files from your computer to your device, see ActiveSync Help on your computer.



View a Picture

1. Tap **Media Gallery**.
2. Tap a category and a subcategory, if necessary.
3. Drag to view additional pictures, if necessary.
4. Tap a picture.
 - Tap **+** to zoom in. Tap **-** to zoom out. Tap and hold to quickly zoom.
 - Double-tap the picture to zoom in to the maximum level. Double-tap to zoom out.
 - After you zoom in, drag to view different areas of the picture.
 - Tap  to delete the picture from the device memory.
5. Tap  for more options.


View a Slideshow

1. Tap **Media Gallery**.
2. Tap a picture.
3. Tap the screen to view additional buttons.
4. Tap .
 - Rotate the device to change the orientation of pictures in the slideshow.
 - To move forward or backward through the slides, drag the screen or press the **Navigation** key right or left.
 - Tap the screen to display the Slideshow controls.

Play a Video

1. Tap **Media Gallery**.
2. Tap a category.
3. Tap a video.
4. Tap **Play**.
5. Tap the screen to view the video controls.
6. Drag the progress bar to jump to a different spot in the video.
7. Tap  to delete the video from the device memory.
8. Tap  for more options.

Play a Video Stream

1. Tap  > **Programs** > **Streaming Player**.
2. Tap **Open**.
3. Tap **Connect with tracking history or manual input**, manually enter the stream hyperlink, or select it from the drop-down list in the History link.
4. To select a link from a bookmark, tap **Connect with Bookmark**.
5. Tap **Connect** to start streaming.

Adjust Playback Volume

- Tap **Volume up +** to increase the volume or tap **Volume down -** to decrease the volume of Streaming Player.
- Tap **Mute** to set the player into mute mode, or tap it again to restore volume.

Play a Stream at a Specific Point

1. Play a stream from the network.
2. Tap and drag the slider to where you want to continue playback. (On-demand streaming only)

Manage Bookmarks

1. When the stream is playing, tap **Menu** > **Add to Bookmark**.
2. Tap **Menu** > **Bookmark Manager** to manage the Bookmarks and create new folders.
3. While adding/editing a bookmark entry, confirm or change the name and select a folder to store the bookmark entry.

Use the Camera








Take a Picture

1. Tap **Camera**.
2. Aim the viewfinder.
3. Tap **+** and **–** to zoom in and zoom out.
4. Tap the center of the screen to focus automatically.
5. Press the center **Navigation** key to take a picture.
6. Tap **Camera** to take more pictures, or tap **Menu** for the following options:
 - **Save to Contacts**—select a contact, and save the picture for that contact.
 - **Send via MMS**
 - **Send via e-mail**
 - **Open in Media Gallery**—view the picture.



NOTE: If you are receiving GPS signals, you can set the camera mode to record location information for the pictures you take.




Change the Camera Mode

1. Tap **Camera**.
2. Tap  to select a camera mode:
 - —take still photographs.
 - —record a video.
 - —place a frame around the photo.
 - —take photos with GPS location information.
 - —take a lower-resolution photo for sending using MMS.
 - —take a lower-resolution video for sending using MMS.



TIP: To quickly switch modes between the camera mode and video mode, press the left **Navigation** key.

Record a Video

1. Tap **Camera**.
2. Tap .
3. Tap  or .
4. Tap **+** and **–** to zoom in and zoom out.
5. Tap the center of the screen to focus automatically.
6. Press the center **Navigation** key to begin recording the video.
7. Press the center **Navigation** key or tap **Stop** to stop recording the video.
8. Tap **Camera** to record more videos.

MPEG-4 EULA

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard (“MPEG-4 Video”) and/or (ii) decoding MPEG-4 video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal, and commercial uses and licensing may be obtained from MPEG LA, LLC. See www.MPEGLA.com.

Organize Your Life


Synchronize your phone with your computer to keep your task list and calendar up-to-date in both locations.

Use the Calendar

Use the calendar to schedule appointments, including meetings and other events. You can also set the calendar to remind you of your appointments. If you use Outlook on your computer, you can synchronize appointments between your phone and computer.

Open the Calendar

Use one of the following methods to open the calendar:

- From the Home screen, tap **Calendar**.
- Tap  > **Programs** > **Calendar**.

Schedule an Appointment

1. From the Home screen, tap **Calendar**.
2. Tap **Menu** > **New Appointment**.
3. Enter information about the appointment.
4. To schedule an all-day event, in **All Day**, tap **Yes**.
5. To make this appointment recurring, tap **Menu** > **Edit** > **Occurs** and select one of the recurrence options.
6. Tap **OK**.

View the Appointments for Today


1. Tap  > **Programs** > **Calendar**.
2. Tap **Menu** > **Go to Today**.

To view your agenda for a specific date, tap **Menu** > **Go to Date**. Tap the date to view.


Use Tasks

The task list is your “things to do” list. A task that has been marked as high priority is preceded by an exclamation mark, and a low priority task is marked by a downward-pointing arrow. Overdue tasks are displayed in bold red.

Create a Task


1. Tap  > **Programs** > **Tasks** > **Menu** > **New Task**.
2. Enter the task name and details, and tap **OK**.

Mark a Task as Completed

1. Tap  > **Programs** > **Tasks**.
2. Select the task to mark complete, and tap **Complete**.

To change the task back to incomplete, tap **Activate**.


Find a Task

1. Tap  > **Programs** > **Tasks**.
2. Tap **Menu** > **Sort by** and select a sort option or **Menu** > **Filter** and select a category.

Set the Clock and Alarms

The current date and time appear on the Home screen. By default, the clock is automatically set to your current time zone.

Use one of the following methods to open the Clock and Alarms settings:

- Tap the date and time on the Home screen.
- Tap  > **Settings** > **Advanced Settings** > **System** tab > **Clock & Alarms**.

Set the Clock Automatically

1. Tap the date and time on the Home screen.
2. Select the **Set Automatically** check box.
3. Tap **OK** to save your changes. A message box appears asking if you want to update the date and time now.
4. Select an option:
 - Tap **Yes** to turn off the phone and turn it on again automatically.
 - Tap **No** to update the date and time the next time you turn off the phone and turn it on again.

When the phone updates the date and time settings, a prompt appears. Tap **Home** or **Visiting**, and then tap **Save** to update the settings. Tap **Cancel** to exit without updating the settings.

Set the Clock Manually

1. Tap the date and time on the Home screen.
2. Clear the **Set Automatically** check box.
3. Tap **Home** to set the clock for your home location, or **Visiting** to set the clock for a location you are visiting.
4. Tap the time zone, and select a time zone.
5. Tap the hours or minutes, and then tap the arrows, or press the **Navigation** key to set the time.
6. Tap **AM** or **PM**, and then tap the arrows or press the **Navigation** key to change the value.
7. Tap the month, and then tap the arrow to select the date from the calendar.
8. Tap **OK** to save your changes.

Set an Alarm

1. Tap the date and time on the Home screen.
2. Tap the **Alarms** tab.
3. Tap **New**.
4. Tap the hours or minutes, and then tap the arrows or press the **Navigation** key to set the time.
5. Select an alarm type.
6. Tap **Snooze**, and then select a snooze time.
7. Tap **Sound**, and then select an alarm sound. Tap **Others** to select a sound file (.mp3, .wav, or .mid) you have saved on your phone. Tap **Play** to preview the selected sound. Use the slider to adjust the volume of the sound.
8. Tap **OK** to save.

Edit or Delete an Alarm


1. Tap the date and time on the Home screen.
2. Tap the **Alarms** tab.
3. Tap an alarm, and then tap **Edit** or **Delete**.

Display the Clock in the Status Bar


1. Tap the date and time on the Home screen.
2. Tap the **More** tab.
3. Select the **Display the clock on the title bar in all programs** check box.

Convert Currency

A data connection is required for this feature.

1. Tap  > **Programs > Tools > Currency Converter**.
2. Tap a currency button to change the currency, and tap a currency.
3. Repeat to select the second currency.
4. Tap the rectangle below the currency you want to convert.
5. Enter the number, and tap **Done**.

Update Conversion Rates

1. Tap  > **Programs > Tools > Currency Converter**.
2. Tap **Update**.

The nüvifone accesses Connected Services to update the conversion rates.

Microsoft® Office Mobile

Your device comes with pre-installed Microsoft Office Mobile applications. Use these applications like you would normally use the Office applications on your computer.

To access these applications, tap  > **Office Mobile**. Select the appropriate application to use.

Excel® Mobile

Create, view, and edit spreadsheets on your device using Excel® Mobile. Any editing or formatting you have done to an Excel Mobile file is kept intact when you open the file on your computer.

Excel Mobile is compatible with Microsoft® Office Excel 2007.

OneNote® Mobile

Take notes with OneNote Mobile. You can also insert audio recording and pictures to your notes.

Word Mobile

View and edit Word documents on your device with Word Mobile. Any editing or formatting you have done to a Word Mobile file is kept intact when you open the file on your computer.

Word Mobile is compatible with Microsoft Office Word 2007.

PowerPoint® Mobile

View presentations using PowerPoint Mobile. It is compatible with Microsoft Office PowerPoint 2007.

Synchronize Your nüvifone

You can synchronize contents and transfer data between your device and your computer using Microsoft® ActiveSync on Windows® XP operating systems.

During synchronization, ActiveSync compares the data in your device with the data in your computer or Exchange Server, and updates all data with recent changes.

For detailed information about ActiveSync, see the Active Sync Help file.

To synchronize on Windows Vista™ operating systems, use Microsoft® Windows Mobile Device Center. Go to www.microsoft.com/windowsmobile/devicecenter.mspx.

Install and Configure ActiveSync on Your Computer

1. Insert the Getting Started CD-ROM in your computer's CD-ROM drive.
2. Follow the on-screen instructions.
3. Connect your device to the computer using the mini-USB cable or Bluetooth technology. See [page 73](#).
4. Follow screen instructions to complete the wizard.
5. Disconnect the device after the synchronization is complete.

Each time you connect your nüvifone to your computer, your nüvifone is automatically synchronized with your computer.

Synchronize Using the USB Cable

1. Install ActiveSync on your computer.
2. Connect the mini-USB plug to the mini-USB connector on the bottom of the device.
3. Connect the other end of the USB cable to your computer.
4. If the USB Connection Mode page appears, tap **ActiveSync** > **OK**. ActiveSync synchronizes your device.




NOTE: You can only synchronize media files, such as music and video files, using a USB cable.

Enable the USB Connection Mode Page

The USB Connection Mode page allows you to select a USB connection mode when you connect your device to your computer. This

page only appears when you connect your device to your computer using a USB cable.

1. Tap  > **Settings** > **Advanced Settings** > **Connections** tab > **USB Setting**.
2. Select the **Ask When I Connect Device** check box.
3. Connect the mini-USB plug to the mini-USB connector on the bottom of the device.
4. Connect the other end of the USB cable to your computer. The USB Connection Mode page appears.
5. Select an option.
6. Tap **OK**.

Mass Storage Mode

Applications cannot access data stored in My Storage while in Mass Storage mode. You can use Mass Storage mode when the computer does not have ActiveSync installed.

Synchronize with an Exchange Server

ActiveSync can also synchronize over a wireless or mobile network with Microsoft Exchange Server, which allows you to sync your e-mail messages. Your mobile phone service or company must be running Microsoft Exchange Server with Exchange ActiveSync.


For detailed information about ActiveSync, see the Active Sync Help file.

Synchronize Using Bluetooth® Technology

Your computer must have a Bluetooth component to synchronize using Bluetooth technology.



NOTE: You can only synchronize media files, such as music and video files, using a USB cable.

1. Enable Bluetooth on your computer.
2. Connect your nūvifone with your computer using Bluetooth. See [page 73](#).
3. From your device, tap  > **Programs > ActiveSync > Menu > Connect Using Bluetooth**.
4. When connected, tap **Sync** to synchronize data.

Backup and Restore Files




IMPORTANT: Some system functions may be suspended or terminated during the backup process or the restore process. When finished, reset your device to revive suspended functions.


Backup



NOTE: If you enter a password when you create the backup file, you will need the password to restore the backup file.


1. Tap  > **Programs** > **Backup**.
2. Tap **Backup**.
3. Select the items you want to back up, and tap **Next**.
4. Follow the on-screen instructions to create the backup file.

Restore

1. Tap  > **Programs** > **Backup**.
2. Tap **Restore**.
3. Select the backup file you want to restore, and tap **Next**.
4. Follow the on-screen instructions to restore the backup file.


Search for Files

Search for files and other items stored in your device. You can search by file name or by words located in various applications.


1. Tap  > **Programs** > **Search**.
2. Enter the file name or word.
3. Select the data type.
4. Tap **Search**.

Get Connected


Manage Wireless Connections

1. Tap  > **Wireless Manager** or tap  > **Settings** > **Wireless Manager**. Wireless Manager shows the connection status of your device.
2. Tap an option to enable or disable it. The icon is yellow when enabled, and white when disabled.

Change Connection Settings

1. Tap  > **Settings** > **Wireless Manager** > **Settings**.
2. Select an option to adjust those settings.
3. Tap **Auto Switch Settings** to set up the times to turn on and off features of the device.

Turn Off the Phone

1. Tap  > **Settings** > **Wireless Manager**.
2. Tap **Phone**.

Turn on Flight Mode

1. Tap  > **Settings** > **Wireless Manager**.
2. Tap **Flight Mode** to turn on Flight Mode.



When Flight Mode is on, the telephone, the network, Bluetooth, and GPS features are deactivated. You cannot send or receive new e-mail or SMS/MMS messages.

Set Up a Wi-Fi Connection

1. Tap  > **Settings** > **Wireless Manager**.
2. Tap **Wi-Fi** to turn on Wi-Fi.

Enable Wi-Fi Sharing


With Wi-Fi Sharing on, you can share your network connection with others, making your device a Wi-Fi router. When Wi-Fi Sharing is on, you cannot use the Internet on your device.

1. Tap  > **Settings** > **Wireless Manager**.
2. Tap **Wi-Fi Sharing**.
3. Tap **OK** > **Connect**.
4. Use one of the following methods to end Wi-Fi Sharing:
 - From the Wi-Fi Sharing page, tap **Menu** > **Exit**.
 - Tap  > **Settings** > **Wireless Manager** > **Wi-Fi Sharing**.


About Bluetooth

Bluetooth wireless technology establishes a wireless connection between devices, such as a computer with Bluetooth technology and the nüvifone. To pair and connect, both devices must be turned on and be within 10 meters of each other.

With Bluetooth enabled in your device, you can synchronize, transfer files, and share services.

For more information about Bluetooth technology, see tap  > **Help**.

Turn On Bluetooth Technology


1. Tap  > **Settings** > **Wireless Manager**.
2. Tap **Bluetooth**.



TIP: When not in use, turn off Bluetooth to conserve battery power.

Make a Device Visible


Other devices with Bluetooth capabilities can detect your device and attempt to beam information to it, establish a partnership, or use a Bluetooth service.

1. Tap  > **Settings** > **Advanced Settings** > **Connections** tab.
2. Tap **Bluetooth** > **Mode** tab.
3. Select the **Turn on Bluetooth** check box, select the **Make this device visible to other devices** check box, and then tap **OK**.

If you do not want your nüvifone to be visible to other devices, remove the check mark from the **Make this device visible to other devices** check box.

Add a Bluetooth Device

The first time you use two devices together, you must “pair” them by establishing a relationship using a PIN/passkey.

1. Enable the Bluetooth component and Find Me/Discoverable/Visible mode on the device to which you are connecting. These settings might be in a Bluetooth, a Connections, or a Hands-free menu.
2. On the nüvifone, tap  > **Settings** > **Advanced Settings** > **Connections** tab.
3. Tap **Bluetooth** > **Devices** tab > **Add new device**.
4. Select the device you want to connect to, and tap **Next**.
5. Enter the alphanumeric passkey of the device you want to connect to, and tap **Next**. You can find the passkey in the documentation that came with the target device.
6. Enter the display name for this connection.




NOTE: The Bluetooth passkey for the nüvifone is **1234**.

After the initial pairing, the two

devices can connect automatically each time you turn them on.


Send and Receive Files

1. Pair and connect the nüvifone with the device you want to exchange files with.
2. Tap  > **Programs** > **File Explorer**.
3. Select the **Bluetooth Neighborhood** folder. A list of all available file transfer servers appears.
4. Select one of the servers to set up a Bluetooth connection. The files in the File Transfer root directory are displayed.
5. Copy and paste the files as needed.

Exchange Files Using FTP

You can exchange files between two Bluetooth devices by enabling the file transfer server and/or client.


Configure the File Transfer Services

1. Tap  > **Settings** > **Wireless Manager** > **Settings** > **Bluetooth Settings** > **FTP** tab.
2. Change the root directory, if necessary. The remote client is not able to view files outside of this directory.
3. Select the **Use server authorization** check box, if necessary.
4. Tap **OK**.


Customize Your nüvifone

Adjust the Backlight


Adjust the Brightness

1. Tap  > **Settings** > **Advanced Settings** > **System** tab > **Brightness**.
2. Adjust the brightness.

Adjust the Backlight Timeout


1. Tap  > **Settings** > **Advanced Settings** > **System** tab > **Backlight**.
2. Adjust the how the backlight operates when the device is running on battery power and on external power.

Keep the Backlight on When Navigating


1. Tap  > **Settings** > **Navigation** > **Backlight Override**.
2. Tap **On When Navigating** > **OK**.

Align the Screen


Align the screen to ensure that the item you tap on the screen is selected.

1. Tap  > **Settings** > **Advanced Settings** > **System** tab > **Screen**.
2. On the **Alignment** tab, tap **Align Screen**, and follow the on-screen instructions.

Orient the Screen


1. Tap  > **Settings** > **Advanced Settings** > **System** tab > **Screen Orientation**.
2. Select a portrait or landscape screen orientation.

Change the Lock Settings

1. Tap  > **Settings** > **Advanced Settings** > **Personal** tab > **Lock**.
2. Select an option:
 - **Puzzle Lock**—complete a puzzle to unlock the screen.
 - **Simple PIN Password**—enter a 4-character PIN to unlock the screen.
 - **Strong Alphanumeric Password**—enter a 7-character password to unlock the screen.
3. Tap **OK** to save the changes.


Set Up Auto Cleaner

Use Auto Cleaner to close the running applications you are not using.

1. Tap  > **Settings** > **Advanced Settings** > **System** tab > **Auto Cleaner**.
2. Select how to close and exit programs.

Set Up Gester




Gester enables you to control the device, such as scroll through screens, using the touch of your finger.

1. Tap  > **Settings** > **Advanced Settings** > **System** tab > **Gester**.
2. Select the check box to turn on Gester.

Change the Appearance


Edit the Home Screen Shortcuts

You can include up to 18 shortcuts on the Home screen.


1. Use one of the following methods to open the Home screen edit page:
 - Tap  > **Settings** > **Home Screen**.
 - Tap and hold any shortcut in the middle section of the Home screen for two seconds.
2. Drag an icon to a new location or to the trash can.
3. To add an icon, tap . Select an application, and tap **Add**.
4. Tap  to save your changes.

To restore the Home screen to the original layout, tap .


Change the Home Screen Theme

1. Tap  > **Settings** > **Appearance** > **Theme**.
2. Select a theme for the Home screen.

Change the Wallpaper

1. Tap  > **Settings** > **Appearance** > **Wallpaper**.
2. Tap **Picture**.
3. Select a picture to use for the Home screen wallpaper.

Customize the Start Menu


1. Tap  > **Settings** > **Advanced Settings** > **Personal** tab > **Menus**.
2. Select up to seven items to appear in the Start menu.

Customize the Call Settings


Change the Profile

1. Tap  > **Settings** > **Sound** > **Profile**.
2. Tap a profile to use.


Set the Ring Tone

1. Tap  > **Settings** > **Sound** > **Ring Tone**.
2. Select a ring tone.
3. Tap **Play** to play the selected ring tone.


Set the Ring Type

1. Tap  > **Settings** > **Sound** > **Ring Type**.
2. Tap a ring type, such as **Vibrate**.


Change the Advanced Sound Settings

1. Tap  > **Settings** > **Sound** > **Advanced**.
2. Select the items you want to hear a sound for.

Automatically Answer Phone Calls

1. Tap  > **Settings** > **Advanced Settings** > **Personal** tab > **Phone** > **Auto Answer** tab.
2. Select the check box to enable the auto answer function.
3. Select how long the device will wait before answering the call.

Activate Connection Alert


1. Tap  > **Settings** > **Advanced Settings** > **Personal** tab > **Phone** > **Call Setting** tab.
2. Select an alert indication when the call is answered.

Configure Your Phone Network Profile

If the network settings for your phone service provider are not detected when you install the SIM card, you can select the network.

GPRS, WAP, and MMS settings are also configured by the Network Setting.

Automatic Configuration

1. Tap  > **Settings** > **Advanced Settings** > **Connections** tab > **Network Setting**.
2. Tap **Auto Detect** to detect the mobile phone service provider (operator) according to your SIM card.
3. Tap **Done**.


Manual Configuration

1. Tap  > **Settings** > **Advanced Settings** > **Connections** tab > **Network Setting**.

2. Select your country.
3. Select your mobile phone service provider (operator).
4. Tap **Done**.


Switch Between GSM and 3G Networks

Choose the right network type for your SIM card.


1. Tap  > **Settings** > **Advanced Settings** > **Connections** tab > **GSM/3G Networks**.
2. From the **Network** box, tap a network or tap **Automatic**. 3G network has priority over GSM network when **Automatic** is selected.
3. Tap **OK**.

Use SMS Cell Broadcast

If SMS Cell Broadcast is supported by your service provider and region, you can receive text messages broadcast to multiple subscribers in the area.


1. Tap  > **Settings** > **Advanced Settings** > **Personal** tab > **Phone** > **Channels** tab.
2. Select the **Enable SMS Cell Broadcast** check box.
3. Tap **Set Languages**, select one or more languages, and tap **OK**.
4. Tap **Set Channels**, select one or more channels, and tap **OK**.

Add a New Channel

1. Tap  > **Settings** > **Advanced Settings** > **Personal** tab > **Phone** > **Channels** tab > **Set Channels** > **New**.
2. Enter the channel name and number, and tap **OK**.

Adjust the Navigation Settings


Adjust the Map Settings

1. Tap  > **Settings** > **Navigation** > **Map**.
2. Tap a setting to adjust it.
 - **Map Detail**—adjust the amount of detail shown on the map. Showing more detail may cause the map to redraw slower.
 - **Orientation**—select **3 Dimensional** to display the map in 3 dimensions (3D) with your direction of travel at the top; **Track Up** to display the map in two dimensions (2D) with your direction of travel at the top; or **North Up** to display the map in 2D with North at the top.
 - **Show Location**—show your location on the nearest road or at your GPS location.

- **Auto Zoom**—select **Enabled** to have the map automatically zoom to show the next turn on the map.
- **Show Speed Limit**—select **Yes** to display the speed limit as you travel on major roadways.
- **Metro Areas**—select **Enabled** to shade metropolitan areas of the map.
- **Vehicle**—select an icon used to display your position on the map.
- **Outline Detailed Maps**—select **Yes** to display lines around the built-in detailed maps.
- **Lat/Lon Grid**—select **Enabled** to display the latitude/longitude grid.
- **Favorites**—select the text size for locations that appear on the map or turn off text labels.


- **POI**—select the text size for POIs on the map or turn off text labels.

Change the Routing Settings

1. Tap  > **Settings** > **Navigation** > **Routing**.
2. Tap a setting to adjust it.
 - **Calculate Routes for**—select your vehicle type to optimize routes.
 - **Off-Route Recalculation**—select how the nüvifone notifies you when you are off your route.
 - **Route Preference**—select a preference for calculating your route.
 - **Turn Preview**—select **Enabled** to show a brief preview of upcoming turns.

- **Avoidance Setup**—select the types of roads or areas you want to avoid in routes. the nüvifone avoids using these items in a route unless there is no alternative. See [page 35](#).

Change the Audio Settings


1. Tap  > **Settings** > **Navigation** > **Audio**.
2. Tap a setting to adjust it.
 - **Voice Prompt**—turn on and off the vocal navigation prompts.
 - **Attention Tone**—turn on and off the tone that is sounded before a navigation prompt.

Adjust the Proximity Points Settings

1. Tap  > **Settings** > **Navigation** > **Proximity Points**.
2. Tap a setting to adjust it.

- **Custom POI Sets**—turn on and off the custom POI (points of interest) sets you have loaded in the nüvifone.
- **Safety Cameras**—turn on and off the Safety Camera databases you have loaded in the nüvifone.
- **Audio Notification**—select how you want to be audibly notified when you approach a custom POI or a safety camera location.

Change the Units of Measure


1. Tap  > **Settings** > **Navigation** > **General**.
2. Select units of measure for distance and speed, direction, elevation, and temperature.

Turn On and Off Safe Mode


1. Tap  > **Settings** > **Navigation** > **General** > **Safe Mode**.
2. Tap **Enabled** to turn on safe mode.

When your vehicle is moving, safe mode disables all functions that require significant operator attention and could become a distraction while driving.


Change the Location Format and Map Datum

1. Tap  > **Settings** > **Navigation** > **General**.
2. Tap a setting to adjust it.
 - **Location Format**—select a format for the latitude and longitude coordinates that matches the paper map you are using. If you select **User UTM Grid**, enter the appropriate coordinate information.
 - **Datum**—select a map datum that matches the paper map you are using. The datum is generally listed in the map's legend.

Change Connected Services Settings

1. Tap  > **Settings** > **Navigation** > **Connected Services**.
2. Tap a setting to adjust it.
 - **Connected Services Online Access**—select how to connect to access Connected Services.
 - **Location Updates**—select to send location updates manually or automatically.
 - **Connected Services Feedback**—enable to periodically send anonymous location information from your phone. Your regular data transfer charges apply.

Change the GPS Settings



1. Tap  > **Settings** > **Navigation** > **GPS**.
2. Tap a setting to adjust it.

- **Auto Update**—select how the nüvifone automatically updates the GPS information.
- **Update When Sync**—select whether the nüvifone automatically updates the GPS information when you sync the nüvifone to your computer.
- **GPS Data Update**—view the information for the last time the GPS data was updated. Tap **Update** to update the GPS data now.
- **GPS Status**—view information about the GPS satellites your device is receiving and their signal strength.



Set Your Location

When you activate the GPS for the first time, or if you have traveled more than 600 miles with the GPS receiver turned off, the GPS must initialize. To shorten the time it takes

to acquire satellites, set your location on the map.

1. Tap  > **Settings** > **Navigation** > **GPS**.
2. Tap **GPS Status**.
3. Tap  > **New Location**.
4. Tap a point on the map near your current location, and tap **OK**.

Turn Off GPS

1. Tap  > **Settings** > **Navigation** > **GPS**.
2. Tap **GPS Status**.
3. Tap  > **Disable GPS**.


Change the Camera and Video Settings

Change the Basic Camera Settings


1. Tap **Camera**.
2. Tap **Menu** to adjust the following settings:




—select a size for the photos.

—turn on when taking close up photos.

—select a count-down time for taking self-portraits.


—select to take 1 (**Off**), 4, or 9 images with one press of the center **Navigation** key.

—open the advanced Camera settings page.




TIP: To quickly adjust these settings, tap the corresponding icon along the top of the screen.

Change the Advanced Camera Settings

1. Tap **Camera** > **Menu** > .
2. Tap the **Camera** tab.
3. Adjust the following settings:
 - **Picture Quality**—select a quality. The finer the quality, the larger the file size.


- **File Prefix Format**—tap **String**, and then enter a prefix in **File Name Prefix**. Tap **Time** to use the date as the file name prefix.
- **File Number**—tap **Reset** to reset the auto-numbering for the photos.
- **Date and Time Stamp**—add a date and time stamp to the photos.
- **Shutter Sound**—play a sound when you take a photo.

Change the Camera Color Settings

1. Tap **Camera** > **Menu** > .
2. Tap the **Color Adjustment** tab.
3. Adjust the following settings:
 - **White Balance**—select the setting, such as **Sunny** or **Cloudy**, to achieve the color that you want in your photos.


- **Effect**—select an effect: **Normal**, **Black-and-White**, **Negative**, or **Sepia**.
- **Brightness**, **Sharpness**, and **Saturation**—adjust the settings as needed.
- **Default**—restore the original settings.

Change the General Camera Settings

1. Tap **Camera** > **Menu** > .
2. Tap the **General** tab.
3. Adjust the settings:
 - **Save To**—select the location to which you want to save the pictures you take.
 - **AC Frequency**—select a frequency.
 - **Metering Mode**—select a metering mode.
 - **Camera Power Saving Mode**—place a check mark in the box and enter a length of time.

- **Use Preview Mode**—place a check mark in the box to preview the pictures you take prior to saving them.
- **Restore Default Value**—restore the default settings.

Change the Video Settings

1. Tap **Camera** > **Menu** > .
2. Tap the **Video** tab.
3. Adjust the settings:
 - **File Extension**—select the file type: MP4 or 3GP.
 - **File Prefix Format**—tap **String**, and then enter a prefix in **File Name Prefix**. Tap **Time** to use the date as the file name prefix.
 - **File Number**—tap **Reset** to reset the auto-numbering for the videos.


- **Include Audio when recording Video**—select the box to include audio, or clear the check box to record video without audio.

View Device Information

The About page contains information about the nüvifone, including software version, unit ID, and copyright information.

1. Tap  > **Settings** > **About**.
2. Select an option.

View System Information


1. Tap  > **Settings** > **Advanced Settings** > **System** tab > **System Information**.
2. Tap the **Device Info** tab and the **Version** tab.

Restore the Default Settings

This process restores all settings to factory defaults and deletes all user-entered information.



CAUTION: Items that you have saved on your device (such as Favorites) are erased. Files saved in My Storage and map data are not erased. Deleted information cannot be recovered.

1. Tap  > **Settings** > **Advanced Settings** > **System** tab > **Default Settings**.
2. Enter **1234**, and then tap **OK**.

All original settings are restored. Any items that you have saved are erased.

Appendix

nüMaps Guarantee™

To receive one free map update (if available), register your nüvifone at www.garminasus.com within 60 days of acquiring satellites and driving with your nüvifone. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you drive with your nüvifone.

Additional Maps

You can purchase additional maps for your nüvifone. To see a list of maps that are compatible with your nüvifone, go to (www.garminasus.com/nuvifoneM20).

Update the Software


Go to www.garminasus.com/nuvifoneM20 to download the latest software update.

Reset the nüvifone


If the nüvifone stops functioning, turn off the nüvifone, and then turn on the nüvifone.

If this does not help, remove the battery cover. Using the stylus, press the red Reset button. The nüvifone should restart and operate normally.

Battery Information

The  battery icon in the status bar indicates the status of the internal battery. To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it; do not unplug the nüvifone until it is totally charged.

Maximize the Battery Life

- Turn down the backlight at  > **Settings** > **Advanced Settings** > **System** tab.
- Do not leave your nüvifone in direct sunlight. Avoid prolonged exposure to excessive heat.

Replace the Battery

If you need to replace the battery in the nüvifone, use an SBP-20 lithium-ion battery. For more information on purchasing a replacement battery, go to www.garminasus.com.



CAUTION: Only use the correct battery type. Using an incorrect battery may present a risk of explosion.



CAUTION: Do not use a sharp object to remove the battery. A sharp object may puncture the battery which may present a risk of fire, chemical burn, electrolyte leak, and/or injury.

To avoid losing your customized settings, replace the battery within five minutes of removing it from your device.

Contact your local waste disposal department for information on properly disposing of the battery and device.

Acquire GPS Satellite Signals

Your nüvifone must acquire GPS (Global Positioning System) satellite signals to navigate. The nüvifone automatically attempts to acquire satellite signals.

If you are indoors, near tall buildings or trees, or in a parking garage, your nüvifone might not acquire satellites. To acquire satellite signals more quickly, take your nüvifone outside, to an area free from tall obstructions.


Change the Fuse in the Vehicle Power Cable



CAUTION: When replacing the fuse, do not lose any of the small pieces and make sure they are put back in the proper position.

If your device does not charge in your vehicle, you may need to replace the fuse located at the tip of the vehicle adapter.

1. Unscrew the end piece, and remove it.
2. Remove the fuse (glass and silver cylinder), and replace with a 1A fast blow fuse of the same size.
3. Ensure that the silver tip is located in the end piece. Screw on the end piece.

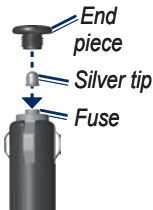

Mount on Your Dashboard

A mounting disk is included in some nüvifone packages. Use the mounting disk to mount your device to the dashboard and comply with certain state and local regulations.



CAUTION: The **permanent** mounting adhesive is extremely difficult to remove after it is installed.

1. Clean and dry the dashboard where you are placing the disk.
2. Remove the backing from the adhesive on the bottom of the disk.
3. Place the disk on the dashboard.
4. Remove the clear plastic cover from the top of the disk.
5. Place the suction cup mount on top of the disk. Flip the lever down (toward the disk).

Specifications

Physical size (W × H × D):

52.57 × 95.3 × 12.8 mm
(2.31 × 3.75 × 0.504 in.)

Weight: 99 g (3.49 oz.)**Display:** 2.8 in. diagonal, 640 × 480 pixels;
VGA display with white backlight and
touchscreen**Case:** Not waterproof (IP51)**Operating Temperature Range:** from 5°F to
113°F (from -15°C to 45°C)**Storing Temperature Range:** from 5°F to
140°F (from -15°C to 60°C)**AC Charger Operating Temperature
Range:** from 32°F to 122°F (from 0°C
to 50°C)**Connector:** mini-USB for power, computer,
or headphones**Battery type:** User-replaceable 920 mA
lithium-ion battery**Standby Time for 2G:** up to 260 hours**Standby Time for 3G:** up to 250 hours**Talk Time for 2G:** up to 2.8 hours***Talk Time for 3G:** up to 3.5 hours*

* Depending on network environment and
phone usage.

Charge time: Approximately 4 hours

Power input: DC vehicle power using vehicle
power cable, or AC power using USB
cable or AC charger

Usage: 10 W max.

GPS receiver: High-sensitivity

Acquisition times*:

Warm: <1 sec.

Cold: <38 sec.

Factory Reset: <45 sec.

*Average acquisition times for a
stationary receiver with a clear view
of the sky.

Frequency Band: 3G 900/2100; 2G
900/1800/1900

Frequency Band for NA: 3G 850/1900; 2G
850/1800/1900

Other connectivity: Bluetooth 2.0+EDR;
802.11 b/g WLAN; mini USB 2.0

OS: Microsoft Windows® Mobile Professional
6.1

Camera/Photos: 3.0 MP camera

Data storage: Internal memory; Data stored
indefinitely

Computer interface: plug-and-play USB
mass storage, ActiveSync

Important Safety and Product Information

For updates to the safety and product information, see the most recent owner's manual at www.garminasus.com/nuvifoneM20.



Warnings

CE0700!

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

General Device Warnings:

- When installing the device in a vehicle, place the device securely so it does not obstruct the driver's view of the road or interfere with vehicle operating controls, such as the steering wheel, foot pedals, or transmission levers. Do not place in front of or above any airbag.
- **Do not become distracted by the device while driving, and always be fully aware of all driving conditions.**
- Always operate the vehicle in a safe manner.
- Minimize the amount of time spent viewing the device's screen while driving and use voice prompts when possible.
- Do not send text messages, place or receive phone calls, input destinations, change settings, or access any functions requiring prolonged use of the device's controls while driving. Pull over in a safe and legal manner before attempting such operations.
- Check and follow local laws regarding device usage.

Navigation Warnings:

- When navigating, carefully compare information displayed on the device to all available navigation sources, including information from street signs, visual sightings, and maps. For safety, always resolve any discrepancies or questions before continuing navigation and defer to

posted road signs.

- The device is designed to provide route suggestions. It is not designed to replace the need for driver attentiveness regarding road closures or road conditions, traffic congestion, weather conditions, or other factors that may affect safety while driving.

Battery Warnings

If these guidelines are not followed, the internal lithium-ion battery may experience a shortened life span or may present a risk of damage to the GPS device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not leave the device exposed to a heat source or in a high temperature location, such as in the sun in an unattended vehicle. To prevent damage, remove the device from the vehicle or store it out of direct sunlight, such as in the glove box.
- Do not puncture or incinerate.
- When storing the device for an extended time, store within the following temperature range: 5°F to 140°F (from -15°C to 60°C).
- Do not operate the device outside of the

following temperature range: 5°F to 113°F (from -15°C to 45°C).

- Contact your local waste disposal department to properly recycle/dispose of the device/battery.

Additional User-replaceable Battery Warnings:

- Do not use a sharp object to remove the battery.
- Keep the battery away from children.
- Do not disassemble, puncture, or damage the battery.
- If using an AC charger or external battery charger, only use the accessory approved for your product.
- Only replace the battery with the correct replacement battery. Using another battery

presents a risk of fire or explosion. To purchase a replacement battery, see your Garmin or ASUS dealer or the Garmin-Asus Web site.

Additional Non-user-replaceable Battery Warnings:

- Do not remove or attempt to remove the non-user-replaceable battery.
- When disposing of the device, take it to a professional service, such as a waste electronics treatment facility, to have the battery removed and recycled.

Pacemakers and Other Medical Devices

Studies have shown that there may be a potential interaction between mobile phones and normal pacemaker operation. The pacemaker industry recommends that people with pacemakers follow these guidelines to minimize any risk of interference with pacemaker operation:

- Always maintain a distance of 15 cm (6 inches) between the pacemaker and any mobile phone that is turned on.
- Store the phone on the opposite side of the pacemaker. Do not carry the phone in a breast pocket.

- Use the ear furthest from the pacemaker in order to minimize any potential for interference.
- If you think that interference may be occurring, turn off the phone immediately.

For other medical devices, consult with your physician or the manufacturer to determine if your mobile phone may interfere with the device, and to determine any precautions that you can take to avoid interference.

Avoid Hearing Damage

You can permanently damage your ears and lose hearing if you listen to the receiver, earbuds, headphones, or headsets at high volume.

Turn the volume down. The volume is typically too loud if you cannot hear people speaking around you. Limit the amount of time you listen at high volume.

If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked.

Avoid Repetitive Motion

You may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body if you perform

repetitive activities, such as typing or playing games, on the device.

Take frequent breaks. If you have discomfort while or after using the device, stop using and see a physician.

Avoid Seizures, Blackouts, and Eyestrain

A very small percentage of people can experience seizures or blackouts caused by light flashes or patterns, such as while watching videos or playing games.

If you have experienced, or have a family history of, seizures or blackouts, consult a physician before playing games or watching videos on your device.

Follow these guidelines to reduce the risk of blackouts, seizures, and eyestrain:

- Avoid prolonged use of and take frequent breaks from using the device.
- Hold the device away from your eyes.
- Use the device in a well-lit room.

If you experience convulsions, eye or muscle twitching, loss of awareness, involuntary movement, or disorientation, stop using the device use and consult a physician.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet that is on a different circuit from the GPS unit.
- Consult the dealer or an experienced radio/TV technician for help.

This product does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could result in permanent damage to the equipment, and void your warranty and your authority to operate this device under Part 15 regulations.

Industry Canada Compliance

Category I radiocommunication devices comply with Industry Canada Standard RSS-210. Category II radiocommunication devices comply with Industry Canada Standard RSS-310.

Radio Frequency Exposure / Specific Absorption Rate

This device is a transmitter and receiver that uses its antenna to send and receive low levels of radio frequency (RF) energy for voice and data communications. The cellular antenna is located above the camera lens,

along the top edge of the back of the device. The Wi-Fi and Bluetooth® antenna is located to the right of the camera lens on the back of the device.

Regular review of scientific research and studies has led to the formation of international safety guidelines and regulations regarding limiting exposure to this RF energy. This product emits RF energy below the published limits when operating in its maximum output power mode and when used with Garmin-Asus authorized accessories. In normal operation, the device will operate at even lower output power modes, depending on many factors including proximity to network cellular towers and the absence of external interference.

The RF exposure guidelines use a unit of measurement known as the specific absorption rate, SAR. The SAR limit applicable to this device set by the FCC is 1.6 watts per kilogram (W/kg), 1.6 W/kg by Industry Canada, and 2.0 W/kg by the Council of the European Union.

This device has been tested and is compliant with the FCC, IC, and European Union RF exposure guidelines for cellular, Wi-Fi, and Bluetooth operation. For countries where

this product is sold outside of the United States, Canada, and the European R&TTE member countries, this product has been tested and is compliant to the applicable RF exposure requirements of the local regulatory authority.

To be sure that your exposure to RF energy does not exceed the FCC and European Union guidelines, follow these precautions:

- Position the device antenna at least 15 mm (5/8 inch) from your body.
- Only use the device with Garmin-Asus approved accessories. Only use accessories that do not have metal parts and that maintain at least 15 mm (5/8 inch) separation between the device and your body.

Care for Your Device

- Avoid dropping your device and operating it in high-shock and high-vibration environments.
- Do not expose the device to water. Contact with water can cause this device to malfunction.
- Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent

damage.

- Never use a hard or sharp object to operate the touchscreen, or damage may result. Though a stylus can be used to operate the touchscreen, never attempt this while operating a vehicle.
- To help avoid theft, remove the device and mount from sight when not in use. Remove the residue on the windshield left by the suction cup.

Important Information

MAP DATA INFORMATION: One of the goals of Garmin and ASUS is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify in product literature and copyright messages displayed to the consumer. Virtually all data sources contain some inaccurate or incomplete data. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

NOTICE REGARDING WINDSHIELD MOUNTING LEGAL RESTRICTIONS:

Before using the suction cup mount on your windshield, check the state and local

laws and ordinances where you drive. Some state laws prohibit drivers from using suction mounts on their windshields while operating motor vehicles. Other state laws allow the suction mount to be located only in specific locations on the windshield. Many other states have enacted restrictions against placing “non-transparent material” on the windshield or placing objects on the windshield in locations that obstruct the driver’s vision. **IT IS THE USER’S RESPONSIBILITY TO USE THE GARMIN-ASUS DEVICE AND MOUNTING OPTIONS IN SUCH A MANNER THAT THE USER IS IN COMPLIANCE WITH ALL APPLICABLE LAWS AND ORDINANCES.** Where required, other Garmin-Asus dashboard or friction mount options should be used to comply with state and local laws and ordinances. Always mount your Garmin-Asus device in a location that does not obstruct the driver’s view of the road. Garmin and ASUS do not assume any responsibility for any fines, penalties, or damages that may be incurred as a result of disregarding this notice or as a result of any state or local law or ordinance relating to the use of your Garmin-Asus

device.

Declaration of Conformity

Hereby, Garmin and ASUS declare that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. To view the full Declaration of Conformity, see www.garminasus.com/nuvifoneM20.


Equipment Use

This nüvifone is for use worldwide, including the following countries:

AT	EE	IS	NO
BE	ES	IT	PL
BG	FI	LI	PT
CH	FR	LT	RO
CY	GB	LU	SE
CZ	GR	LV	SI
DE	HU	MT	SK
DK	IE	NL	TR

Troubleshooting Issues


If your device does not acquire satellites, try one or more of the following:

- Make sure the GPS is turned on. Tap  > **Settings** > **Navigation** > **GPS** > **GPS Status**, and then verify that you are receiving satellite signals.
- Verify that the GPS antenna is unobstructed. You must be outdoors or in a vehicle and have a clear view of the sky. Solid materials (except untinted glass), buildings, and dense trees can block satellite signals.
- Make sure the GPS has enough time to initialize. When the GPS is turned on for the first time, it may take a few minutes to initialize.

- If you have traveled more than 600 miles with the GPS receiver turned off, set your location on the map.

If your device will not turn on, try one or more of the following:

- Charge the battery.
- Make sure the **Hold** key on the right side of the unit is up. If the red dot near the **Hold** key is visible, the unit is locked.

If you need to turn off the wireless features of your phone, for example for an airplane flight, tap  > **Settings** > **Wireless Manager** > **Flight Mode**.

Index

Symbols

2D map view 80

A

ActiveSync

Bluetooth technology 69

install 67

USB 68

additional maps 88

address 19

alarm

delete 65

edit 65

set 64

align the screen 75

appointment

make 61

navigate to 29

save local event as 23

save movie time as 24

view 62

attention tone 82

audio settings 82

auto complete 11

auto zoom map 81

avoid

edit custom

avoidances 35

road types 82

specific areas 35

specific roads 35

B

backlight

adjust 75

brightness 75

keep on when

navigating 75

timeout 75

backup files 70

battery

charge 3

information 88

install 2

remove 89

warnings 93–94

block recognizer 11

Bluetooth 72

Bluetooth technology 69,

72, 73–74

add a device 73

make visible 73

send and receive files 74

turn on 72

browse the map 36

C

calendar 61

calibrate the screen 75

call 13

end 13

call history 17

call options 14

camera 59

color 85

mode 59

settings 84, 86

care information 97

cell broadcast 80

Ciao! 39–42

accept invite 40

hide location 42

invite 40

join 39

location updates 83

register 39

remove a friend 42

status 40, 41

- view friends 41–42
- cities, find 26
- clock
 - in status bar 65
 - set 63
 - set automatically 63
 - set manually 64
- computer connection 68
- conference call 15, 16
- connected services 43–46
 - connection 83
 - settings 83
- connections 71
- contacts
 - add 17
 - favorites 18
 - import 18
 - navigate to 29
- convert currency 65
- coordinates 27
- cradle 3
- currency, convert 65
- custom POIs 28
 - settings 82

D

- Declaration of Conformity 98
- default
 - camera 86
 - input mode 12
 - restore all settings 87
- delete
 - alarm 65
 - all settings and favorites 87
 - all user data 87
 - call history 17
 - Favorites 37
 - message 49
 - picture 56
 - points from route 34
 - route 34
 - video 57
- detour 33
- device information 87

E

- e-mail 50
- emergency assistance 36
- End key 1
- enter data 11

- Excel 66

F

- Favorite
 - contact 18
 - delete 37
 - edit locations 37
 - location category 37
 - locations 26
- files
 - backup 70
 - exchange using FTP 74
 - restore 70
 - search for 70
 - send and receive 74
- file types
 - media gallery 56
 - music 54
- find locations. *See* search
 - for locations
- flight mode 71, 99
- flight status 22–23
- forward 49
- free map update 88
- FTP 74
- fuse, change 90

G

geocache 27

Gester 76

Go! page 20

go home 19

GPS

about GPS 89

new location 84

settings 83

turn off 84

update 84

green LED 7

H

headphone jack 91

help 7

Hold key 1

hold phone call 14

home location 19

Home screen 5

icons 77

layout 77

theme 77

I

icons 8

import contacts 18

input panel 11

Internet 51

share connection with

computer 51

intersections, find 27

L

LED 7

letter recognizer 11

lithium-ion battery 88, 91

local events 23

local search 25

location-based service 29

location format 83

location information 20

change update

method 40

send updates 83

location messages 48

lock the phone 7, 76

M

make a phone call 13

map

additional 88

browse 36

customize 80

detail level 80

map set 38

orientation 80

update 88

view 80

map datum 83

map settings 80

MapSource 88

map update 88

maximum speed, reset 32

Media Gallery 56–58

messages (SMS/MMS)

delete 49

forward 49

new 47

read 48

Microsoft Office

Mobile 66

Excel 66

Excel Mobile 66

OneNote Mobile 66

PowerPoint Mobile 66

Word Mobile 66

MMS 47

mount

on windshield 3–4

remove from mount 4
movie times 24
mute 6, 14

N

navigation. *See* route
Navigation key 6
network profile 79
news 46
 articles 52–53
Newstation 52–53
note 12
nūMaps Guarantee 88

O

odometer 32
off road route 81
OneNote 66
output, audio
 headphone jack 91

P

pacemakers 94
Panoramio 25
Panoramio photos 25
parking, find 24
phone 13–18

receive a call 15
settings 78–87
sound settings 78

picture

brightness 86
effects 86
file types 56
quality 85
take 59
view 56

Playlist 55

play music 54
position icon 81
Power key 1
PowerPoint 66
predictive text 11
profile 78
proximity points 82
 settings 82
puzzle lock 76

R

recalculate route 81
red LED 7
register i, 39
remove the mount 4
reply 48

reply to message 48
reset 88
 maximum speed 32
 odometer 32
 trip computer 32
restore all settings 87
restore files 70
ring settings 78
ring tone 78
 save a song as 55
 set 78
rotate screen 75
route
 add stops 33
 all turns in 31
 details 31
 edit 33, 34
 follow 30
 keep backlight on
 during 75
 next turn 31
 plan 34
 preferences 81
 save 33
 settings 80, 81
 simulate 35

- stop 33
- take saved route 34
- to appointment 29
- turn list 31
- RSS 52–53

S

- safe mode 82
- safety cameras 45–46
 - settings 82
- SAR 96–97
- satellite signals 84, 89
- save location to
 - Favorites 20
- save your current
 - location 33
- screen
 - align 75
 - calibrate 75
 - Home 5
 - lock 7
 - orient 75
 - rotate 75
 - use the touchscreen 6
- search
 - for files 70
 - internet 51

- search for locations 19
 - address 19
 - by category 21
 - change the search
 - area 21
 - favorites 26
 - fuel prices 22
 - location options 20
 - near a different city 21
 - near a different
 - location 21
 - near your route 21
 - points of interest 21
 - spell name 21
- send
 - e-mail 50
 - found location 20, 28
 - MMS 47
 - SMS 47
 - text 47
 - your location 48
- Send key 1
- set a your current
 - location 84
- settings
 - audio 82

- Connected Services 83
 - phone 78–87
 - route 81
- set your location
 - manually 84
- SIM card
 - copy contacts 18
 - install 2
- slideshow 57
- SMS 47–50
 - cell broadcast 80
- software
 - update 88
- sound
 - profile 78
 - volume 6
- speakerphone 14
- specifications 91
- speed limit 81
- spell the location 21
- Start menu 7
 - customize 77
- status, Ciao! 40
- status bar 65
 - clock 65
 - icons 8

storage information 97
stylus 6
suction cup 3
synchronize
 e-mail 50
 using Bluetooth
 technology 69
 using USB cable 68
 with an Exchange
 Server 69
system information 87

T

text message 47–50
theft, ways to avoid 97
track
 edit 38
 record 37
 save 38
 view on map 38
traffic 43–46
 avoid 44–46
 icon 44
transcriber 12
transfer file 74
trip computer 32
turn off phone 3, 71

turn preview 81

U

unit ID 87
units 82
update
 maps 88
 software 88
USB cable 1, 3, 51, 67, 68
USB Connection Mode 68
user data, delete 87

V

vehicle icon 81
vehicle type 81
vibrate 6, 78
video
 call 16
 file types 56
 play 57
 play a stream 58
 play stream 58
 record 60
 settings 86–87
voicemail 15
voice note 12
voice prompt 82

volume 6
 keys 6
 video stream 58
Volume keys 1

W

wallpaper 77
weather 45–46
WebUpdater 88
Where Am I? 36
white pages 18, 46
Wi-Fi
 set up 71
 sharing 72
Wireless Manager 71
word completion 11
Word files 66

**For the latest free software updates
(excluding map data) throughout the life of
your nüvifone, visit www.garminasus.com.**